



SHEARLINE ORIGINAL

AUTO FEEDER ASSEMBLY

www.shearline.com

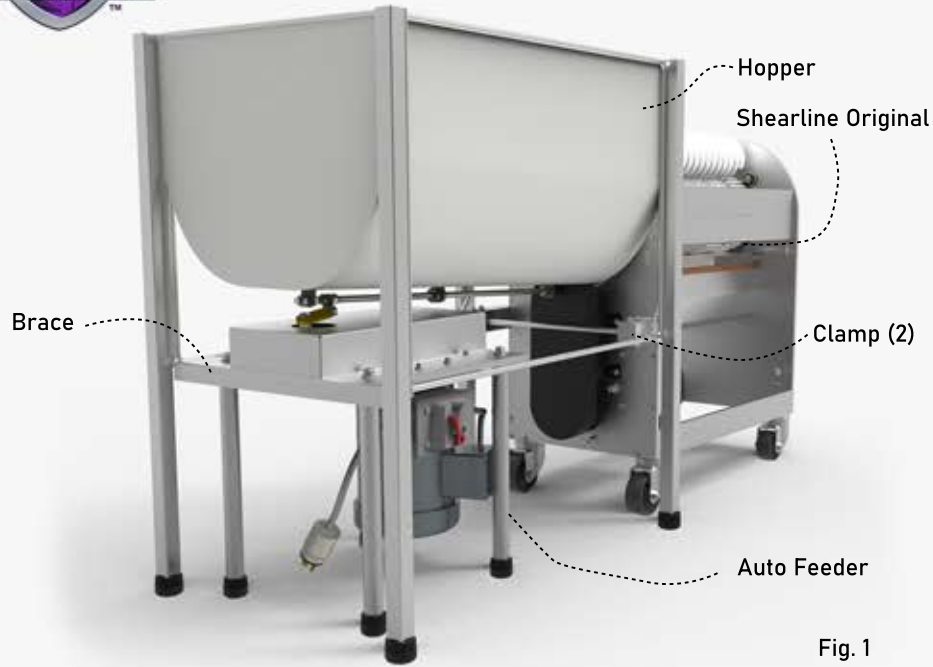


Fig. 1

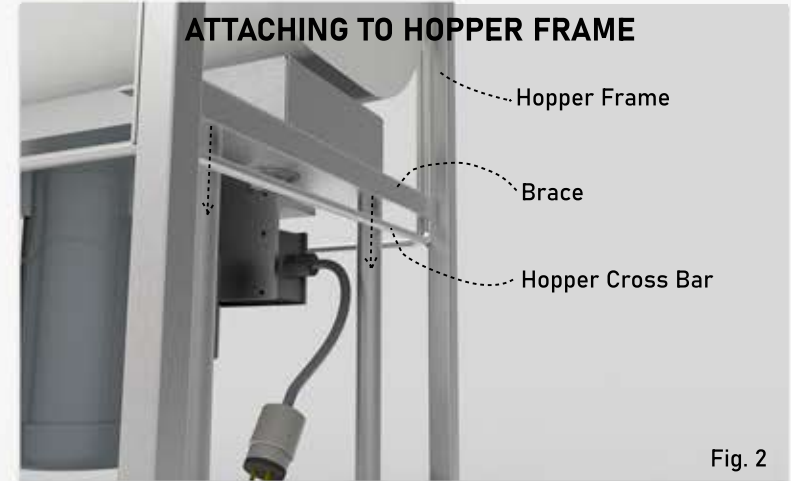


Fig. 2

Step 1: To ensure that the Auto Feeder remains in place during operation, the inside curve of the BRACE must sit over the HOPPER CROSS BAR, where it will lock in place.

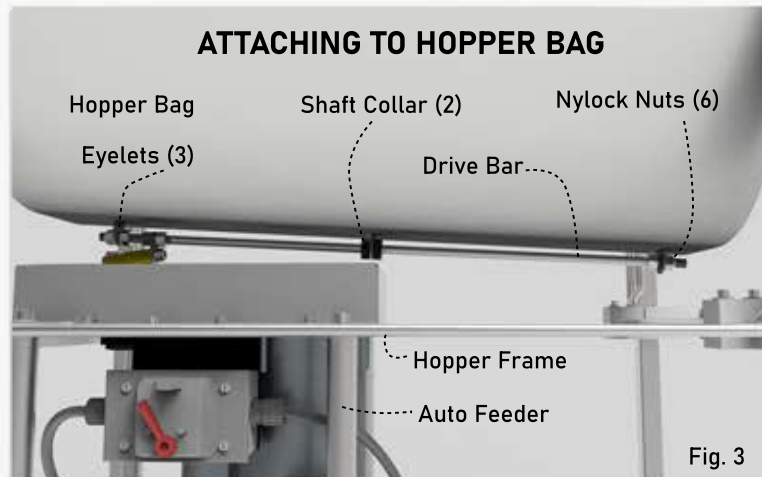


Fig. 3

Step 2: Run the DRIVE BAR through the EYELETS on the HOPPER BAG, ensuring that the SHAFT COLLARS are **loosely** in place on **either** side of the center EYELET **before** threading on the NYLOCK NUTS. Adjust the NYLOCK nuts so that the outer EYELETS **spread apart**, then tighten the SHAFT COLLARS around the center EYELET.

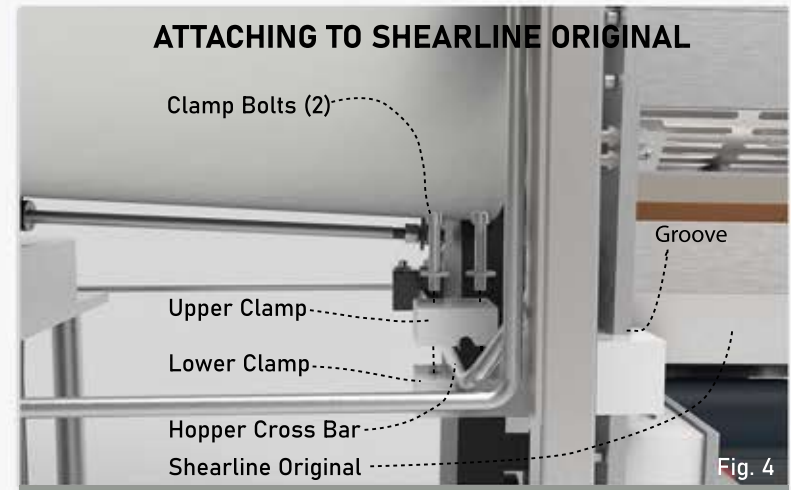


Fig. 4

Step 3: Lock the GROOVE of the LOWER CLAMP into the side of the SHEARLINE ORIGINAL until the HOPPER CROSS BAR fits into the cutout of the LOWER CLAMP. Use the CLAMP BOLTS (1/4"-20x1.25") to fasten the UPPER CLAMP to the LOWER CLAMP. Do this for both sides.